

AMMANN

Diesel rammer



ADS 70
ACR 70 D

Translation of the original Operating instructions

Valid since: 2011/03/18

Technical modifications reserved.

Ammann Verdichtung GmbH
Josef Dietzgen-Str. 36
D-53773 Hennef
Telefon 02242 / 88020
Telefax 02242 / 880259
e-mail: info.avd@ammann-group.com
www.ammann-group.com

ADS 70 / ACR 70 D

1



Printed in Germany

AMMANN

EG-Konformitätserklärung

EC-Declaration of Conformity / Déclaration „CE“ de Conformité / Declaración de conformidad de la CE

gemäß Maschinen-Richtlinie 2006/42/EG, Anhang II A und Geräuschrictlinie 2000/14/EG

as defined by the Machinery directive 2006/42/EC Annex II A and Noise directive 2000/14/EC

conformément à la directive „CE“ relative aux machines 2006/42/CE, Annexe II A et la directive du bruit 2000/14/CE

conforme a la directiva de maquinaria 2006/42/CE, Anexo II A y a la directiva sobre ruidos 2000/14/CE

Hersteller (Name und Anschrift):

Manufacturer (name and adress):

Fabricant (nom et adress):

Fabricante (nombre y dirección):

Ammann Verdichtung GmbH

Josef-Dietzgen-Straße 36

D-53773 Hennef

Vibr.-Stampfer / Vibr. rammer / Pilonneuse vibrante / Apisonadora vibratoria

Hiermit erklären wir, dass die Maschine (Typ)

Herewith we declare that the machine (Type)

Par la présente, nous déclarons que la machine (Type)

Por la presente, declaramos que la máquina (Tipo)

Leistung / Output / Puissance / Potencia:

ACR 60	ACR 68	ADS 70
Honda GX100	Honda GX100	Yanmar L48AE
2.2 kW	2.2 kW	3.2 kW

Seriennummer:

Serial number:

Numéro de série:

Número de serie:

weitere Informationen siehe Typenschild
look at machine plate for more information

informations détaillés sur plaque type

para más información consulte la placa de características

folgenden einschlägigen Bestimmungen entspricht:

complies with the following provisions applying to it:

correspond aux dispositions pertinentes suivantes:

corresponde a las siguientes disposiciones pertinentes:

2006/42/EG	2000/14/EG	2005/88/EG	2004/108/EG
2006/42/EC	2000/14/EC	2005/88/EC	2004/108/EC
2006/42/CE	2000/14/CE	2005/88/CE	2004/108/CE
2006/42/CE	2000/14/CE	2005/88/CE	2004/108/CE

Angewandte harmonisierte Normen :

Applied harmonized standards:

Normes harmonisées appliquées:

Normas armonizadas aplicadas:

EN 500-1 ; EN 500-4

Die benannte Stelle nach 2000/14/EG

The notified body of 2000/14/EC

L'organisme habilité de 2000/14/CE

El organismo citado según 2000/14/CE

TÜV Rheinland
Product Safety GmbH
D-51101 Köln
Kenn-Nr. 0197

wurde (wird) eingeschaltet zur / was (is) engaged for / intervient pour / ha (habrá) intervenido para:

Konformitätsbewertung nach Anhang VIII aus 2000/14/EG

valuation of conformity to Annex VIII of 2000/14/EC

conformément à l'Annexe VIII de 2000/14/CE

la evaluación de conformidad, según Anexo VIII de 2000/14/CE

ISO 9001 Zertifikats-Nr.:

ISO 9001 certificate No.:

09100 67054

ISO 9001 attestation n°:

ISO 9001 n° de certificado:

Gemessener Schalleistungspegel L_{WA,m}

Measured sound power level L_{WA,m}

Niveau de puissance de son L_{WA,m}

Nivel de potencia sonora medido L_{WA,m}

105 dB	105 dB	106 dB
108 dB	108 dB	108 dB

Garantierter Schalleistungspegel L_{WA,g}

Guaranted sound power level L_{WA,g}

Niveau de puissance de son garanti L_{WA,g}

Nivel de potencia sonora garantizado L_{WA,g}

Hennef, 20.08.2010

Ort, Datum

Place, date / Lieu, date / Lugar, fecha

ppa. Dipl.-Ing. Reiner Schulz, Technische Leitung

Unterschrift, Angabe der Funktion im Unternehmen

Signature, acting in the company / Signature, en qualité de /

Firma, en calidad de Assinatura

Aufbewahrung der technischen Unterlagen bei o.g. Person

Technical documents are kept by the above mentioned person

Conservation des documents techniques par la personne susmentionnée

La persona arriba indicada guarda la documentación técnica

The field-experienced development and construction as well as the manufacturer's long years of experience in the production of vibration rammers are the guarantee for very best quality and utmost reliability of your machine.

This operating and service manual includes the following contents:

- safety regulations
- description of the machine
- operating instructions
- maintenance instructions
- maintenance schedule

Respecting this manual

- makes it easier to get to know the machine.
- helps avoid malfunctions or disturbances due to improper use.

Keeping to the maintenance instructions

- increases the rammer's reliability during operation on job sites,
- prolongs the machine's working life,
- helps reduce repair costs and downtimes.

Ammann-Maschinenbau GmbH cannot assume any liability for the functioning of the machine

- if it is operated in a manner that does not correspond to the proper operating instructions,
- if it is used in fields of application for which it is not provided and which do not correspond to proper use (see paragraph 3.1) and which differ from the proper fields of application (paragraph 2.1).

No warranty can be claimed if :

- mistakes are made in operation
- wrong fuel is used.
- no maintenance checks and/or works are carried out,

Note :

- This manual has been written for operating and service staff on the job sites.
- This operating and maintenance manual is to be kept ready to hand near the machine.
- Operating the rammer is only allowed after the operator has been trained on it and in accordance with the present instructions.
- The safety regulations described in paragraph 3.0 on pages 9 to 13, the „Safety guidelines for the operation of road rollers and ground compactors“, issued by the Civil Engineering Employer's Liability Insurance Association, and the rules for prevention of accidents must absolutely be observed.

For your own safety and in order to avoid disturbances of the machine's functioning, only Ammann spare parts must be used (paragraph 2.2 „Modifications on the machine“).

The spare parts list and operating manual can also be supplied in different languages through your Ammann dealer by indicating the rammer's serial number.

The warranty and liability conditions as provided in Ammann Verdichtung GmbH's General Terms and Conditions are neither extended nor substituted by the above-mentioned or following remarks.

Ammann Verdichtung GmbH


Please fill in when handing over the machine :

.....
1. Rammer model

.....
2. Serial number


.....
3. Engine model

.....
4. Engine serial number

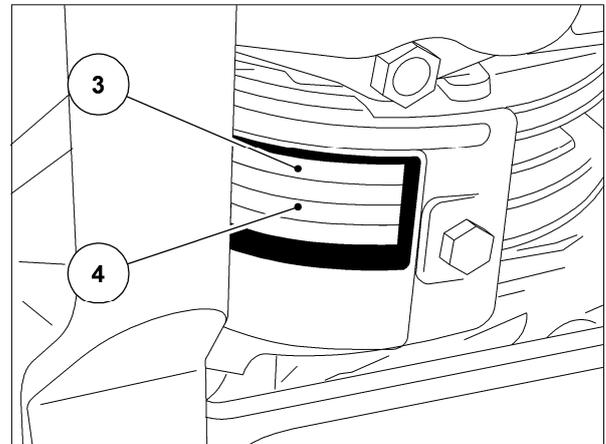

Attention :

When taking over the rammer, you will be trained in operation and maintenance by one of our employees or by our dealer. Here, it will be absolutely necessary to respect the safety remarks and danger warnings.

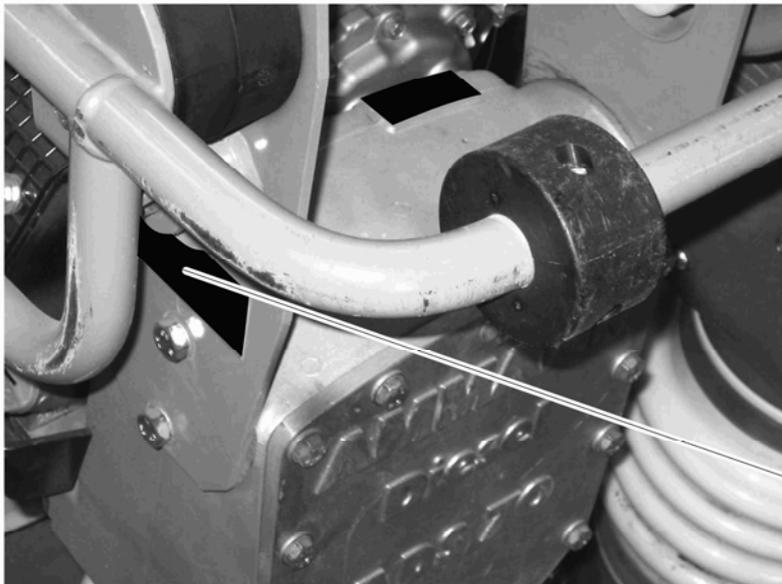

BGP0507022

2	
1	
Ammann Verdichtung GmbH • Josef-Dietzgen-Straße 36 • D-53773 Hennef Made in Germany	
Designation	
Type	S/N
○ Service Weight	kg ○
○ Engine Power	kW ○
CE	Year of Construction
AMMANN	
2-00210130	

Table of contents :

1.0 Technical specifications	5
1.1 Main dimensions	5
1.2 Technical specifications	5
1.3 Noise and vibration values	6
2.0 Description	7
2.1 Fields of application	7
2.2 Modifications on the machine	7
3.0 Safety regulations	9
3.1 Proper use	10
3.2 Operating the vibration rammer	10
3.3 Safety remarks in the operating/maintenance manual	10
3.4 Warning stickers on the vibration rammer	11
3.5 Loading the vibration rammer	11
3.6 Starting the vibration rammer	11
3.6.1 Before start-up	11
3.6.2 Start-up	11
3.6.3 Start-up in closed rooms	12
3.7 Working with the vibration rammer	12
3.7.1 Persons in the danger area	12
3.7.2 Moving the vibration rammer	12
3.7.3 Moving the vibration rammer on slopes	12
3.7.4 Conduct in traffic	12
3.7.5 Checking the effects of vibration	12
3.7.6 Parking the vibration rammer	12
3.7.7 Parking the vibration rammer on slopes	12
3.8 Taking in fuel	13
3.9 Maintenance works	13
3.9.1 Working on the engine	13
3.9.2 Cleaning works	13
3.9.3 After the maintenance works	13
3.10 Repair	13
4.0 Loading and transport	15
5.0 Operation	15
5.1 Control before use	15
5.2 Refuelling	15
5.3 Starting the engine	16
5.4 Cold start device	16
5.5 Working with the vibration rammer	17
5.6 Adjustment during breaks	17
5.7 Stopping the engine	17
6.0 Recommendations for compaction works with DS	17
68	
7.0 Maintenance	
7.1 General remarks on maintenance/maintenance work	18
7.2 Instructions for running-in	18
7.3 Diesel engine	18
7.4 Changing the oil in the tamping system	19
7.5 Cleaning the diesel filter	19
7.6 Checking, cleaning and replacing the air filter	20
8.0 Screw torques	21
9.0 Maintenance schedule	22

1.1 Main dimensions ADS 70 / ACR 70 D

Dimension	A	B	C	D	E
Mm	340	280	670	360	980

Fig. 4


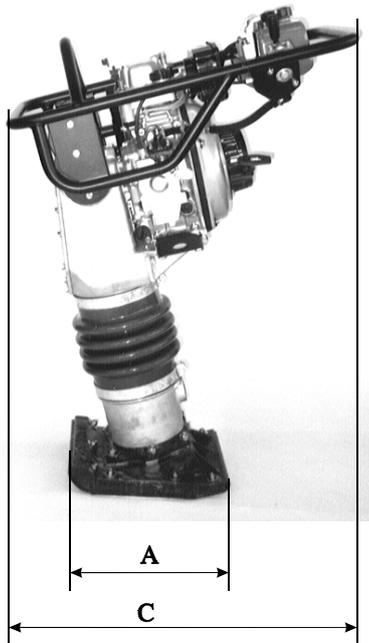


Fig. 5

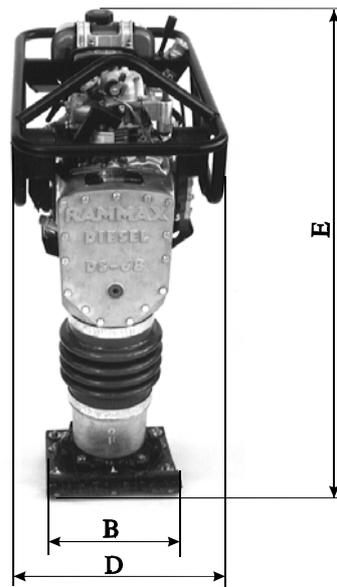

1.2 Technical specifications ADS 70 / ACR 70 D

Weight	83 kg
Length of butt plate	340 mm
Width of butt plate	280 mm
Overall length	670 mm
Overall width	360 mm
Engine	Yanmar L48AE diesel engine with 3.2 kW/4.3 hp at
Engine speed	3250 rpm
Cooling	air cooled
Number of impacts	730 min ⁻¹
Jump height	up to 60 mm
Surface capacity	up to 210 m ² /h
Impact force	16 kN
Impact energy	95 J
Travel speed	up to 12 m/min

Filling capacities :

Fuel tank	2,5 l
Oil inside the butt plate	1,5 l

1.3 Noise and vibration values

The following noise and vibration data according to EC Machinery Directive in the version (2006/42/EC), was determined, taking into account the following standards and directives.

During operation, these values may vary in accordance with the existing operating conditions.

Noise values

The sound level according to appendix 1, paragraph 1.7.4.u of the EC-machinery regulation is for

- **Sound pressure level at the operator's stand :**

$$L_{PA} = 94,3 \text{ dB}$$

- **Measured sound power level $L_{WA,m}$:**

$$L_{WA,m} = 106 \text{ dB}$$

- **Guaranteed sound power level $L_{WA,g}$**

$$L_{WA,g} = 108 \text{ dB}$$

The noise values were determined, taking into account the following directives and standards: Directive 2000/14/EC / EN ISO 3744 / EN 500-4

Hand-arm-vibration values

Hand/arm vibration values according to Appendix 1, sub-clause 3.6.3.1 of the EC Machinery Directive:

Weighted effective acceleration

$$11,3 \text{ m/s}^2$$

Uncertainty K

$$1,0 \text{ m/s}^2$$

The acceleration value was determined, taking into account the following directives and standards: EN 500-4 / DIN EN ISO 5349

Technical modifications reserved.

2.0 Description

Ever growing requirements towards engineering and efficiency demand for continuous development and new conceptions in power, easy handling and operating safety of a compaction machine.

Due to long lasting experience, use of diesel rammers under highest load, in practical and most difficult applications on delicate job sites, technical innovations have been found that have been integrated in construction (and design), thus generating a highly demanding quality concept.

The newly developed antivibration handle bar allows the operator to work with a very easily manoeuvrable diesel rammer offering reduced vibrations in the handle area.

2.1 Fields of application :

The Ammann Diesel rammer ADS-70 has especially been designed for compaction works in water, gas or cable trenches as well as in distant heating trenches or for works on dam or dike protection. Road construction, all kinds of repair works on roads or pathways, job site reinstatements, underground compaction in basements and on hall soils are the ideal application for the ADS-70.

2.2 Modifications on the machine :

For safety reasons, it is not allowed to the user to carry out modifications or conversions on the rammer himself without the manufacturer's authorization. This machine is only to be equipped with original spare parts which have especially been designed for this appliance and which meet with the manufacturer's specifications. Installation or use of extra equipment or specials may reduce the operating safety.

The manufacturer cannot be held liable for any damage caused by the use of non-original spare parts or of extra equipment.

3.0 Safety regulations



3.1 Proper use :

The vibration rammer ADS-70 is manufactured according to the latest technology and recognized safety standards. In spite of this, the use of the roller may involve risks for life and health of the user or of third persons respectively damage to the machine itself or to other objects if :

- it is used for other purposes than those for which it has been built
- it is improperly modified or converted
- the safety regulations are not kept to
- it is not operated and/or serviced by skilled staff

The ADS-70 must only be used if it is in technically perfect condition for the applications for which it is properly intended and with a due sense of concern for safety and awareness of possible dangers according to the operating instructions. Especially disturbances which might affect the safety of the machine must immediately be eradicated.

For operation of the vibration rammer, the relevant regulations for prevention of accidents, the standard safety rules and the regulations which are in force in each country do, of course, apply.

The paragraph „Fields of application“ (2.1) defines the applications for which the ADS-70 is exclusively determined. Any different use or use going beyond these applications is improper. The manufacturer/ supplier cannot be held liable for any damage or injury which might result from such improper use. The user alone must assume full responsibility for the results of improper use of the machine.

3.2 Operating the vibration rammer :

Only skilled persons over 18 years, who have been trained on the roller and who have been instructed to do such work, are allowed to operate the rammer. Competences and responsibilities must be clearly determined before operation and must strictly be kept to.

Persons who are under the influence of drugs, medicine or alcohol must neither operate the roller nor carry out maintenance or repair works.

Maintenance and repair works require special knowledge and must, therefore, only be carried out by skilled staff.

3.3 Safety remarks in the operating/maintenance manual :



Danger

Where this sign appears, situations are mentioned in which persons might be exposed to danger.

Attention :

Where this remark appears, information is given about possible disturbances on the machine or on machine components.

Note :

Under this remark, technical information providing for the optimum economical use of the machine is given.

3.4 Warning stickers on the vibration rammer :

Safety labels and warning stickers must be kept completely legible and must absolutely be observed.
Damaged and illegible safety labels and warning stickers must immediately be renewed.
All labels and stickers can be ordered according to our spare parts list.

3.5 Loading the vibration rammer :

- The rammer must be secured against tipping over or sliding.
- On transport vehicles, the rammer must be secured so that it cannot roll down, slide or tip over.

There is danger to life for persons who

- step under suspended loads or who stand underneath suspended loads.

3.6 Starting the vibration rammer :

3.6.1 Before start-up :

- The rammer must only be operated from the operator's stand which is always behind the machine.
- Before start-up, the operator must make himself familiar with the equipment, with operating and control elements as well as with the functioning of the machine.
- The operator must make use of his personal protective equipment such as safety helmet, safety boots etc.

Before start-up, always check whether :

- there are persons or obstacles beside or underneath the rammer
 - the rammer is free of oily or inflammable substances
 - all levers are free of grease, oil, fuel, dirt, snow or ice
 - the rammer shows any obvious defects
 - all safety devices are firmly in their place
 - all operating elements work all right
- Do never start the rammer if the control elements are defective.
 - Do not attach any loose objects to the machine.

3.6.2 Start-up :

For starting the rammer, all control levers must be placed in „**neutral position**“.
Check all indicator and control elements after start-up.

3.6.3 Start-up in closed rooms :

Exhaust gases are highly dangerous !

When starting the roller in closed rooms, it is, therefore, indispensable to provide for sufficient ventilation.

3.7 Working with the vibration rammer :

3.7.1 Persons in the danger area :

Before starting operation – even after short breaks –, check whether persons or obstacles keep within the danger area.

Give warning signs if necessary. Stop operation immediately if persons do not leave the danger area in spite of the warnings.

3.7.2 Moving the vibration rammer :

- In cases of emergency or danger, the engine must immediately be stopped. Do only start operation again after the danger, due to which operation was stopped, has been removed.
- In case of unusual noise or smoke development, stop the machine, find out the reason and have it removed.

3.7.3 Moving the vibration rammer on slopes :

- Do not work on slopes that are steeper than the rammer's maximum gradeability provides for.
- Work carefully on slopes and always straight up or down in direction.
- On humid and loose-packed soils, the rammer's ground adherence on slopes is reduced considerably.
Increased danger of accidents !

3.7.4 Conduct in traffic :

- Choose speed in accordance with the working conditions.
- Do always give priority to loaded transport vehicles.
- Keep a safe distance to edges and hill flanks.

3.7.5 Checking the effects of vibration :

When carrying out compaction works with vibration, the effect on nearby buildings and pipes lying in the ground (gas, water, sewerage, current conduction) must be checked and, if necessary, the compaction work must be stopped.

Never use vibration on hard ground (concrete or frozen soils); damage could be caused to the bearings !

3.7.6 Parking the vibration rammer :

If possible, park the rammer on even, rigid ground.

Before leaving the rammer :

- stop the engine.

Secure parking machines which might constitute an obstacle to traffic by conspicuous measures.

3.7.7 Parking the vibration rammer on slopes :

Secure the rammer so that it cannot tip over.

3.8 Taking in fuel :

- Do not breathe in fuel vapours.
- Do not refuel the rammer in closed rooms.
- Do not spill fuel; catch fuel running out before it can seep away into the soil.
- Do only refuel the rammer with the engine stopped.
- No open fire, do not smoke.

3.9 Maintenance works :

- Only skilled and trained staff is allowed to carry out maintenance works.
- Keep away unauthorized persons from the machine.
- Do never carry out maintenance works on a driving machine or with the engine running.
- Park the rammer on even and rigid ground.

3.9.1 Working on the engine :

Let engine oil drain off at working temperature. – **Danger of scaldings !**

Wipe off overflowing oil, catch oil running out and dispose of in an environment-friendly manner.

Keep used filters and other oily material in a separate, especially marked container and dispose of in an environment-friendly manner.

3.9.2 Cleaning works :

- Never carry out cleaning works with the engine running.
- Never use petrol or other easily inflammable substances for cleaning.
- When cleaning with the steam jet cleaner, cover all electrical components and the insulation material or do not expose them directly to water or steam jets.
- Do not hold the cleaning jet directly onto the sound absorber.

3.9.3 After the maintenance works :

- Install any protective devices again after having carried out cleaning and maintenance works.
- Carry out a performance test.

3.10 Repair :


If the rammer is defective, hang a corresponding warning sign on it.

Repair works are only to be carried out by skilled staff having been instructed to do so.

Fig. 6

4.0 Loading and transport :

- For loading the rammer with a lifting device, a cross-strut „Q“ is installed to the middle of the handle bar „H“ (Fig. 6).

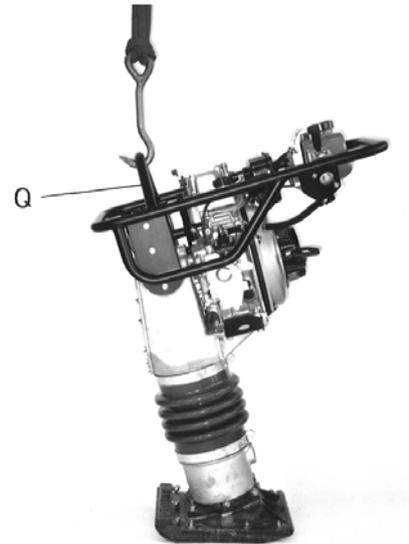

Attention :

- In order to avoid any danger or risk to persons, do only use ramps with a sufficient load capacity and which are safely secured.
- The rammer must be lashed down for transport so that it is secured against sliding or tipping over.
- Use appropriate lifting devices.

Note :

- See „Safety regulations“ page 9.
- For weights, see „Technical specifications“ on page 5.

5.0 Operation

5.1 Control before use :

- Avoid any type of work which might seem to be hazardous or which might reduce the stability of the rammer.
- Control the rammer visually and have any damages or faults repaired.
- Check that there are no leaking points in the fuel system or in the bellows.

5.2 Refuelling :

- Do only use pure diesel fuel.
- Close the fuel tank immediately after having filled it and pay attention to utmost cleanness.



Danger :

Fire risk !

- Do only refuel the rammer with the engine stopped.
- Do not breathe in fuel vapours.
- No open fire, do not smoke.

5.3 Starting the engine :

NEW !!!

Due to the new throttle adjustment, it is for the first time possible to adapt the number of impacts to the nature of the soil to be compacted.

This is achieved by the double-declutch position „M“ of the throttle lever. When the throttle lever is placed in this position, the number of impacts of the rammer is considerably lower than when it is placed on full throttle position (Start).

When the throttle lever is placed on idle running position (L), it must be switched over to full throttle position (Start) only.

Attention: Do only switch over to double-declutch position (M) from full throttle position (Start).

Note :

Keep to the starting instructions of the engine manufacturer.

1. Open the fuel cock „H“ (Fig. 8).
2. Place the throttle lever in position „full throttle“ (Fig. 7).
3. Start the engine according to the YANMAR starting instructions.

5.4 Cold start device :

Push the piston „KS“ on the cold start device twice when outside temperatures are very low (Fig. 9). Preferably fill the cold start device with engine oil **10W10**.

Note :

Push the cold start button only twice ! In case that it has been pushed more than twice, the reversible starter must be pulled through without decompression being pushed. After this, the starting procedure must be repeated without pushing the cold start button (Fig. 9).

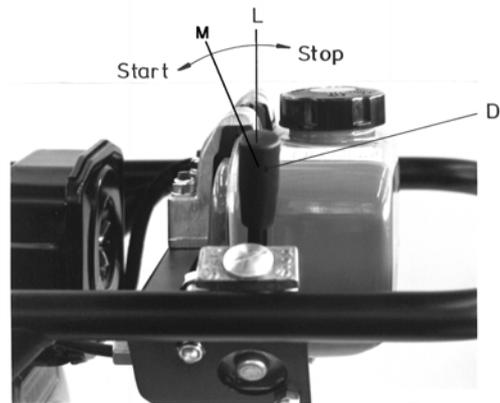


Fig. 7

Fig. 8

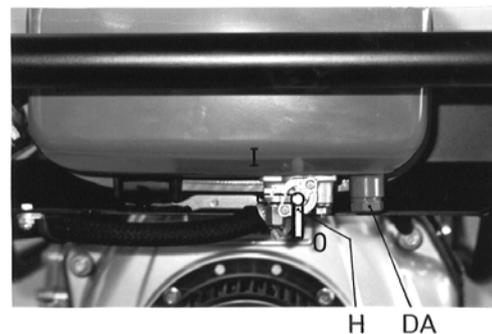


Fig. 9

5.5 Working with the vibration rammer :

- Avoid the rammer vibrating while its butt plate is not touching ground.
- Never lift the rammer during operation !

Note :

- The moving speed can be regulated over the rammer's inclination.

Inclination forwards = fast movement forwards

Inclination backwards = slow movement forwards

- The moving speed can as well be regulated over the pressure exerted on the handle bar.

5.6 Adjustment during breaks :

- Place the throttle lever in position „idle running“ (L; Fig. 7).

Attention :

Never leave the rammer unsupervised during working breaks !

5.7 Stopping the engine :

- Place the throttle lever „G“ to „Stop“-position and the engine will stop (Fig. 7).
 - Close the fuel cock by turning it in position „0“ (Fig. 8).
-

6.0 Recommendation for compaction works with ADS 70

The maximum layer height depends on several factors :

1. nature of the ground
2. humidity
3. grain distribution in the ground
4. grain size

For this reason, it is not possible to give exact details regarding the maximum layer height.

Recommendation : Determine the maximum layer height in each single case by tests and by taking samples of the soil !

7.0 Maintenance

7.1 General remarks on maintenance and maintenance work :

Strictly keep to all safety regulations when carrying out maintenance works !

Careful maintenance guarantees a much better functioning safety of the roller and prolongs the life of all important components. The time and work required for this purpose are out of all proportion to any disturbances that might occur due to non-observance.

- Engine and machine must be thoroughly cleaned before any maintenance work is carried out.
 - The engine must be inactive during all maintenance work.
 - Do only carry out maintenance and repair work with the machine standing on even, rigid ground and being secured against rolling away.
 - Ensure that any maintenance and inspection work provided for and described in the operating instruction is observed and carried out, including instructions on replacement of parts. Such work must only be done **by skilled and qualified staff**.
 - During maintenance works, neither oil nor fuel must get into ground or drains. These must be caught up in suitable containers and disposed off in an environment-friendly manner !
-

7.2 Instructions for running-in :

Maintenance after 25 operating hours :

- Check all screw connections and tighten where necessary.
 - Change the diesel filter (page 19, paragraph 7.5).
 - Engine : See maintenance instructions for YANMAR L 40 AE !
-

7.3 Diesel engine :

See operating instructions YANMAR L 40 AE.



Danger : You can get seriously burned by hot engine components !

7.4 Changing the oil in the tamping system :

- An oil change in the tamping system must be carried out every 200 operating hours or at least once a year.
- Remove the oil drain screw plug, let the oil drain off into a suitable container and dispose of in an environment-friendly manner (Fig. 10).
- Clean the oil drain screw plug and put it in its place again. Then unscrew plug „B“ from the feeder opening (Fig. 13).
- Fill in oil (15W40) until the oil level shows in the middle of the oil level gauge (filling capacity: 1,5 l).
- Screw in plug „B“ into the feeder opening again.

7.5 Cleaning the diesel filter :

Fig. 13

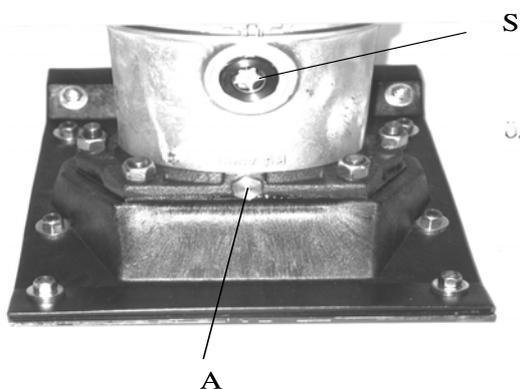


Fig. 10

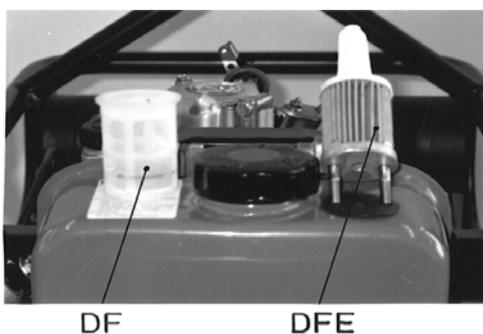
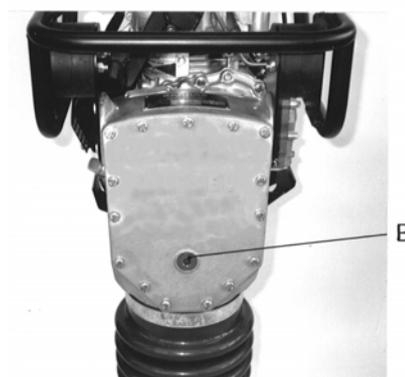


Fig. 11

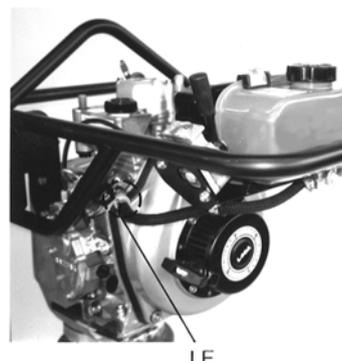


Fig. 12

- The diesel filter „DF“, the diesel filter element „DFE“ and the pipe filter „LF“ must be cleaned or replaced at least once a year (Fig. 11/12).
- Open the drain plug „DA“ and let the fuel drain off.
- Remove both screws on the fuel cock and take out the diesel filter element through the feeder opening.
- Reinstall again in reversed order after replacement or cleaning.

Note :


Pay attention to utmost cleanness when working on fuel pipes and on the fuel tank !

Fig. 14

7.6 Checking, cleaning and replacing the air filter :

Changing the air filter cartridge :

- Remove wing nut „M“ from the air filter cover.
- Take off cover „D“ from the air filter housing and take out the air filter cartridge „LFP“.
- After having inserted the cleaned or a new air filter cartridge, close cover „D“ and reinstall wing nut „M“ again (Fig. 14).

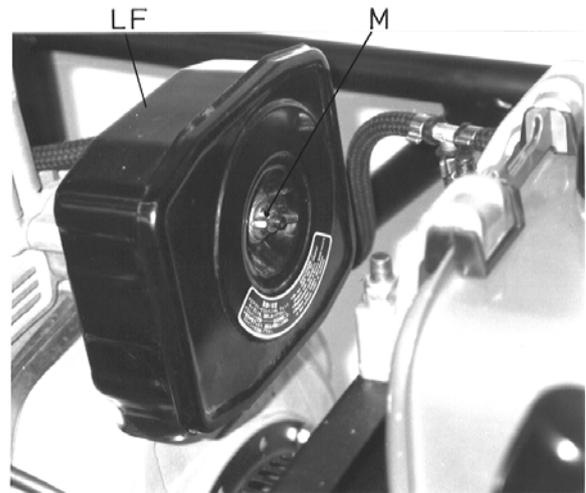

Attention :

Never use petrol or hot fluids for cleaning the filter cartridge !!!

After having cleaned the filter cartridge, check on possible damage with a pocket lamp.

Filter cartridges which show damage to the gasket or to the cartridge itself must absolutely be replaced.

The air filter cartridge must be replaced after having been cleaned three times or after one year in use at the latest.

It is not possible to clean the filter cartridge if it is polluted by deposit containing soot particles ! Use a new cartridge then !

Make a note on the cartridge cover of each cleaning carried out.

Insufficient cleaning and treatment of the filter cartridge may cause serious damage to the engine !!!

Dry cleaning :



Danger :

Eye injuries possible !

Wear safety clothing (glasses, gloves) !

- Blow out the filter cartridge with dry compressed air (maximum 5 bar) from the inside to the outside.

Wet cleaning :

Clean the filter cartridge in lukewarm water with usual commercial mild-action detergent by waving it from one side to the other. Afterwards, flush with cold water carefully, hydro-extract and dry thoroughly.

8.0 Screw torques for screws with metric threads

Screw Dimensions	Torques Nm		
	8.8	10.9	12.9
M4	3	5	5
M5	6	9	10
M6	10	15	18
M8	25	35	45
M10	50	75	83
M12	88	123	147
M14	137	196	235
M16	211	300	358
M18	290	412	490
M20	412	578	696
M22	560	785	942
M24	711	1000	1200
M27	1050	1480	1774
M30	1420	2010	2400

Screw dimensions	Torques ft-lb		
	8.8	10.9	12.9
M4	2	3	4
M5	4	7	7
M6	7	11	13
M8	18	26	33
M10	37	55	61
M12	65	91	108
M14	101	145	173
M16	156	221	264
M18	213	303	361
M20	304	426	513
M22	413	559	695
M24	524	798	885
M27	774	1092	1308
M30	1047	1482	1770

Property classes for screws with non treated, non greased surface. The screw's quality marks appear on the screw heads.

8.8 = 8G;

10.9 = 10K;

12.9 = 12K

The values give a 90 % utilization of the screw's apparent yielding point at a coefficient of friction of μ total = 0,14.

Observance of the screw torques is controlled by torquemeter. When lubricant MoSo2 is used, the indicated screw torques do not apply.

Note : Always renew self-locking nuts after disassembly !

9.0 Maintenance schedule

Period/Operating hours	Maintenance work to be carried out	Description – Page
Daily	Diesel engine (see operating instructions for YANMAR L 40 AE) Check oil level inside the tamping system Check the rammer on exterior damage	Page 19
After 25 operating hours	Diesel engine (see operating instructions for YANMAR L 40 AE) Check whether all screws are still tight and tighten if necessary. Change fuel filter	Page 19
After 100 operating hours	Change air filter cartridge (earlier if necessary due to strong use of the rammer)	Page 20
Every 200 operating hours	Check oil level inside the tamping system Check whether all screws are still tight Change fuel filter Check fuel pipes on possible leaks	Page 19 Page 19
Every 500 operating hours	Change the oil inside the tamping system	Page 19
Once a year	Take the vibration rammer to the next RAMMAX service station for inspection	